

**OPERATING INSTRUCTIONS**

**MODEL PG-7 PROGRAMMABLE T.V. GAME**


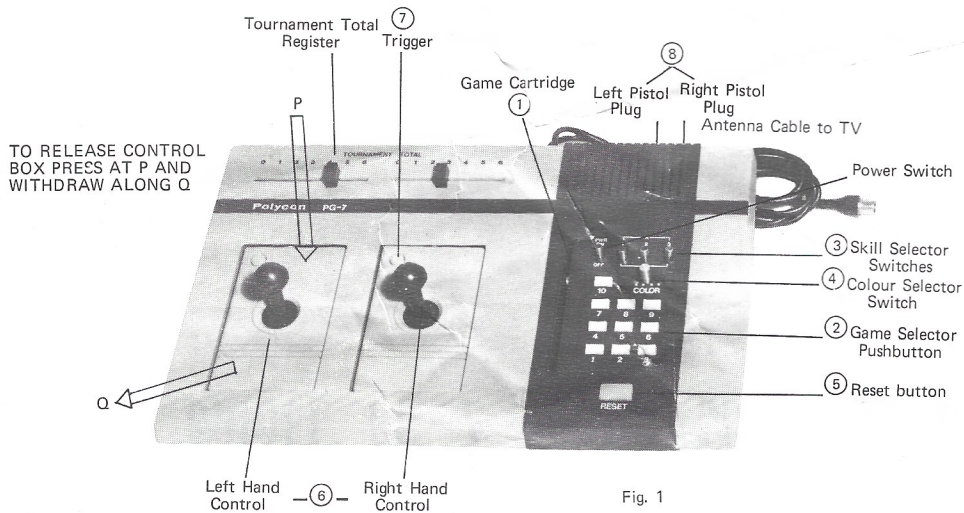


Fig. 1

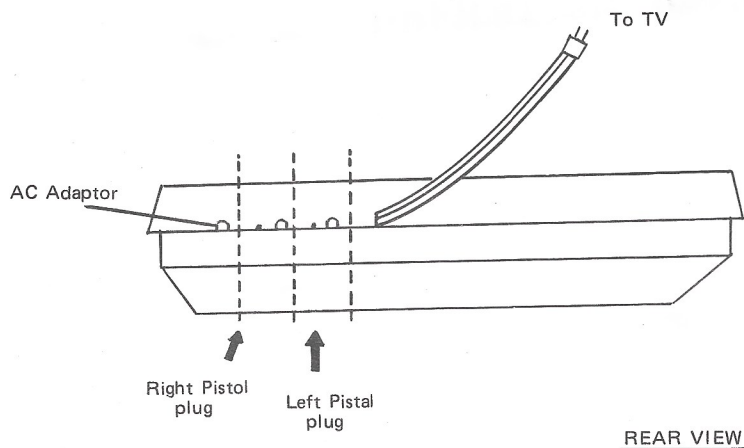

REAR VIEW

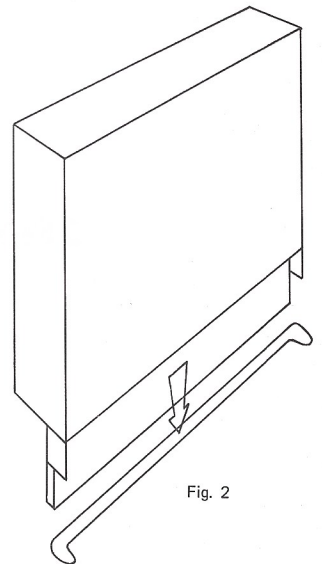


Fig. 2

Your new programmable T.V. game Model PG-7 is the most sophisticated of its kind now on the market. All ages will enjoy hours of thrills and challenges because we offer an unlimited series of game combinations and we provide you with several degree of difficulty options so you can test your skills under maximum conditions. It's easy to operate ---- just plug your favourite cartridge into the main PG-7 console ---- it connects to any brand T.V. and screen size, black and white or color. Now you can realistically race against your opponent's car on our Roadrace circuit, or jump over 34 buses on a motorcycle, hurt down your enemy's tank over mined battle field, score high on soccer, tip another basket or just practice up on your game. PG-7 makes it all happen, and right in the comfort of your own home or office.

#### SPECIAL FEATURES:

- An unlimited action-packed series of game cartridges for use only on the PG-7 programmable T.V. game console.
- Up to ten different games in one cartridge alone.
- Two joystick controls.
- Three independant degree of difficulty options.
- Four object and background color selections.
- Actual figure display for exciting authenticity.
- Realistic sound
- Tournament scoring.
- 6 penlight batteries or 9V AC adaptor.

#### PG-7 CONSOLE CONTROL APPARATUS: (See figure 1)

1. **Cartridge Slot** --- [- shaped to ensure correct cartridge orientation.
2. **Game Selector Pushbuttons** --- Selects different games.
3. **Skill Selector Switches** --- Set to "A" or "B" position independantly with regard to speed, size or number of objects, depending on the game cartridge.
4. **Color Selector Switch** --- Commands one of four color combinations.
5. **Reset Button** --- Restarts finished game or resets game after power is turned on.
6. **Hand-Controlled Joysticks** --- Two units are provided for each contestant to control position or speed of object on the screen. To take out control box from console, press down near the top and withdraw along the bottom.
7. **Hand-Controlled Trigger Button** --- serves ball or fires at target.
8. **Pistol Plugs** --- Two pairs are located for left and right pistol insertion.

#### TO OPERATE:

Disconnect your T.V.'s antenna and replace it with the PG-7 console antenna cable.

Insure that game power is in the "off" position. Plug in your favourite cartridge in the correct orientation with respect to the [- shaped slot, (see figure 2). Insert cartridge carefully until it is at the bottom of travel.

Switch power supply to "on" position. Press reset button. Now press the corresponding game selector button of your choice according to the instruction on the cartridge.

Turn on your T.V. and tune to the output channel of the console as indicated on the rear of the console. Now adjust for a clear color picture, by tuning your contrast, brightness and color contrast controls (if using a color set). Depending on your T.V., it may be necessary to adjust horizontal or vertical holds as well.

Set color selector switch to desired color.

Now you are ready to begin your game. For individual game series instructions, and use of skill switches and hand controls, please turn to your selected game cartridge for full printed instructions.

#### SAFETY PRECAUTIONS:

Always switch power supply to "off" before inserting or removing the game cartridge.

Avoid excessive cartridge exposure to hot or moist places.

Keep cartridges free of dirt and dust.

Switch game to "off" position when not in use. Continuous game pattern display on T.V. screen for more than 6 to 8 hours duration may cause permanent imprint of pattern on the screen.

#### POWER SUPPLY:

6 penlight batteries or AC adaptor with 9V to 11V 200mA output and 2.5 mm output jack with central position tip.