

COLOR	PARTS SIDE		SOLDER SIDE	COLOR
RED	VIDEO R	1	37 VIDEO G	GREEN
BLUE	VIDEO B	2	38 SYNC.	WHITE
GRAY	SPEAKER	3	39 GND.	BLACK
		4	40	
		5	41	
		6	42	
		7	43	
	COIN SW.	8	44 AJUSTMENT	
BROWN	PLAYER START SW.	9	45 PLAYER START SW.	
RED	PLAYER SMALL	10	46 PLAYER SMALL	
ORANGE	PLAYER BET SW.	11	47 PLAYER BET SW.	
YELLOW	PLAYER TAKE SCORE	12	48 PLAYER TAKE SCORE	
BLUE	PLAYER DOUBLE UP	13	49 PLAYER DOUBLE UP	
		14	50	
		15	51	
PURPLE	PLAYER BIO	16	52 PLAYER BIG	
		17	53	
WHITE	COIN SW. A	18	54 KEY IN SW.	WHITE
	COIN SW. C	19	55 COIN SW. D	
RED	BOOKS SW.	20	56 TEST SW.	GREEN
WHITE	PAY OUT SW.	21	57 KEY OUT SW.	BLUE
	HOPPER COIN FULL SW.	22	58 HOPPER COIN SW.	GREEN
YELLOW	COIN A COUNTER	23	59 LOCK OUT COIL A	
	KEY IN COUNTER	24	60	
	COIN B COUNTER	25	61 LOCK OUT COIL B	
	COIN C COUNTER	26	62 LOCK OUT COIL C	
	HOPPER COUNTER	27	63 COUNTER (LACK OF CHIP)	
PURPLE	KEY OUT COUNTER	28	64 Hopper Motor Drive	
BLUE	START LAMP	29	65 PLAYER START LAMP	
YELLOW	PLAYER /SMALL LAMP	30	66 PLAYER BIG/SMALL LAMP	
ORANGE	PLAYER BET LAMP	31	67 PLAYER BET LAMP	
RED	PLAYER TAKE SCORE LAMP	32	68 PLAYER TAKE SCORE LAMP	
BROWN	PLAYER W-UP/BET LAMP	33	69 PLAYER W-UP/BET LAMP	
	BIG Lamp	34	70	
		35	71	
		36	72	

SP 200
15 018

COLOR	PARTS SIDE		SOLDER SIDE		COLOR
BLACK	GND.	1	11	GND.	BLACK
BLACK	GND.	2	12	GND.	BLACK
RED	+5V	3	13	+5V	RED
RED	+5V	4	14	+5V	RED
WHITE	+12V	5	15	+12V	WHITE
WHITE	COUNTER +V	6	16	LOCK OUT +V	WHITE
BLUE	HOPPER SW.	7	17	HOPPER SW.	BLUE
		8	18		
	GND.	9	19	GND.	
	GND.	10	20	GND.	

<P2>

C:\DIAGRAM\BONUS.CNT

203811

819 611

2. DIP SWITCH SETTING :

DIP SWITCH 1		1	2	3	4	5	6	7	8
GAME STYLE	TICKET GETTON	ON OFF							
HOPPER OUT SW	ACTIVE LOW ACTIVE HIGH		OFF ON						
PAY OUT MODE	PAY OUT SW. AUTOMATIC			OFF ON					
W-UP "7"	LOSS EVEN				OFF ON				
W-UP. PAY RATE	80% 90%					OFF ON			
W-UP GAME	ON OFF						OFF ON		
BET MAX	8 BET 16 BET 32 BET 50 BET							OFF ON OFF ON	OFF ON ON ON

DIP SWITCH 2		1	2	3	4	5	6	7	8
MAIN GAME PAY-RATE	90%	OFF	OFF	OFF					
	85%	ON	OFF	OFF					
	80%	OFF	ON	OFF					
	75%	ON	ON	OFF					
	70%	OFF	OFF	ON					
	65%	ON	OFF	ON					
	60%	OFF	ON	ON					
55%	ON	ON	ON						
HOPPER LIMIT	300				OFF	OFF			
	500				ON	OFF			
	1000				OFF	ON			
	UNLIMITED				ON	ON			
100 ODDS SOUND	ON OFF						OFF ON		
KEY IN TYPE	B-TYPE A-TYPE							OFF ON	
CENTER SUPER 7 BET LIMIT	UNLIMITED LIMITED	RELATED WITH DIP SW. NO 4-6							OFF ON

DIP SWITCH 3		1	2	3	4	5	6	7	8
	A TYPE			B TYPE					
KEY IN RATE	1 COIN 10 CREDIT 1 COIN 20 CREDIT 1 COIN 50 CREDIT 1 COIN 100 CREDIT	ON OFF ON <u>OFF</u>	ON ON OFF <u>OFF</u>	1 COIN 5 CREDIT 1 COIN 10 CREDIT 1 COIN 25 CREDIT 1 COIN 50 CREDIT					
COIN A RATE	1 COIN 10 CREDIT 1 COIN 20 CREDIT 1 COIN 50 CREDIT 1 COIN 10 CREDIT			<u>ON</u> OFF ON OFF	<u>ON</u> ON OFF OFF				
COIN D RATE	C TYPE 1 TICKET/COIN 100 CREDIT	D TYPE 1 COIN 2 CREDIT 2 COIN 10 CREDIT 5 COIN 1 CREDIT				<u>ON</u> <u>OFF</u> ON OFF	ON <u>ON</u> OFF OFF		
COIN C RATE	1 COIN 1 CREDIT 1 COIN 2 CREDIT 1 COIN 5 CREDIT 1 COIN 10 CREDIT							ON OFF ON <u>OFF</u>	ON ON OFF <u>OFF</u>

DIP SWITCH 4		1	2	3	4	5	6	7	8
CREDIT LIMITED	UNLIMITED 100,000 50,000 40,000 30,000 20,000 10,000 5,000	ON OFF ON OFF ON OFF <u>ON</u> OFF	ON ON OFF OFF ON ON <u>OFF</u> OFF	ON ON ON OFF OFF OFF <u>OFF</u> OFF					
DISPLAY OF CREDIT LIMIT	ON OFF				<u>ON</u> OFF				
TYPE OF COIN D	C TICKET D GETTONI					<u>ON</u> <u>OFF</u>			
BONUS PLAY MINIMUM BET	8 BET 16 BET						ON OFF		
REEL SPEED	HIGH LOW							ON OFF	
COIN A MODE	EXCHANGE UNEXCHANGE								ON <u>OFF</u>

DIP SWITCH 5		1	2	3	4	5	6	7	8
COIN IN RATE	100 CREDITI 1 IMPULSO							OFF	OFF
	100 CREDITI 10 IMPULSI							ON	OFF
	100 CREDITI 5 IMPULSI							OFF	ON
	100 CREDITI 100 IMPULSI							ON	ON
COIN IN LIMIT	20000		<input checked="" type="checkbox"/> ON	<input checked="" type="checkbox"/> ON					
	10000		OFF	ON					
	5000		ON	OFF					
	1000		OFF	OFF					
COIN OUT RATE	100 CREDITI 100 IMPULSI				OFF	OFF			
	100 CREDITI 10 IMPULSI				<input checked="" type="checkbox"/> ON	<input checked="" type="checkbox"/> OFF			
	100 CREDITI 5 IMPULSI				OFF	ON			
	100 CREDITI 1 IMPULSO				ON	ON			
W-UP-GIRL	ON						<input checked="" type="checkbox"/> ON		
	OFF						OFF		

PUSH BUTTON:


punti	alto	basso	raddoppia	bet	start
TAKE SCORE	BIG	SMALL	W - UP		START
LEFT STOP	CENTER STOP	RIGHT STOP	BET	BET	ALL-STOP
sinistra	mezzo	destra	bet	bet	stop

ACCREDITA	ALTO	BASSO	BET	BET	START
STOP	STOP	STOP	ROSSO	BLU	STOP
	PREMIO	1	2	RADDOP.	ALL
				3	4

JAMMA CONNECTOR


COMPONENTS SIDE	PIN		SOLDER SIDE
GND	1	A	GND
GND	2	B	GND
+5V	3	C	+5V
+5V	4	D	+5V
	5	E	
+12V	6	F	+12V
	7	H	
23 C COIN COUNTER IN	8	J	27 C COUNTER OUT
	9	K	
3 C SPEAKER (+)	10	L	1 C SPEAKER (GND)
	11	M	
1 C VIDEO RED	12	N	1 S VIDEO GREEN
2 C VIDEO BLUE	13	P	2 S VIDEO SYNC
VIDEO GND	14	R	20 C TEST SW
22 S TICKET OUT	15	S	COLLECT BUTTON
18 C COIN A SW	16	T	
	17	U	COLLECT LAMP
16 C HOLD 3 BUTTON	18	V	34 C HOLD 3 LAMP
10 C HOLD 4 BUTTON	19	W	30 C HOLD 4 LAMP
12 C HOLD 2 BUTTON	20	X	32 C HOLD 2 LAMP
HOLD 1 BUTTON	21	Y	HOLD 1 LAMP
13 C HOLD 5 BUTTON	22	Z	33 C HOLD 5 LAMP
9 C START BUTTON	23	a	29 C START LAMP
11 C PLAY	24	b	31 C PLAY LAMP
	25	c	28 S MOTOR TICKET
	26	d	
GND	27	e	GND
GND	28	f	GND

SCHEMA COLLEGAMENTO TICKET DISPENCER SU SCHEDA CHERRY GOLD I

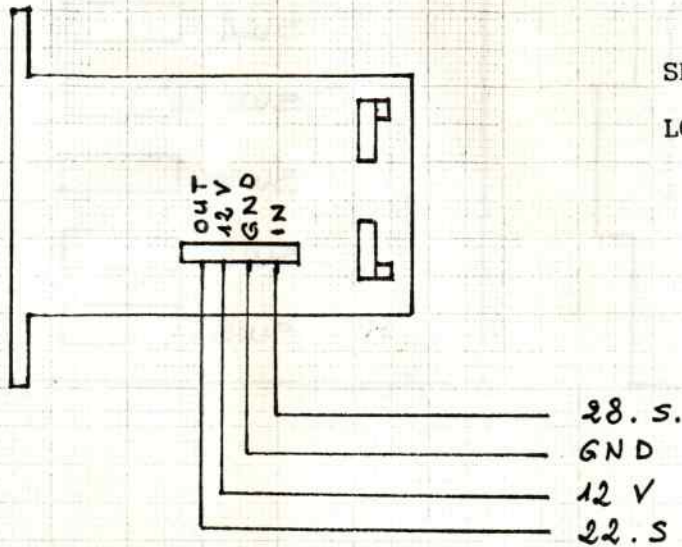







SPOSTARE, DEL GRUPPO DIP SWITCH 1,
LO SWITCH 1 SU ON

SCHEMA DI COLLEGAMENTO PER HOPPER MKII



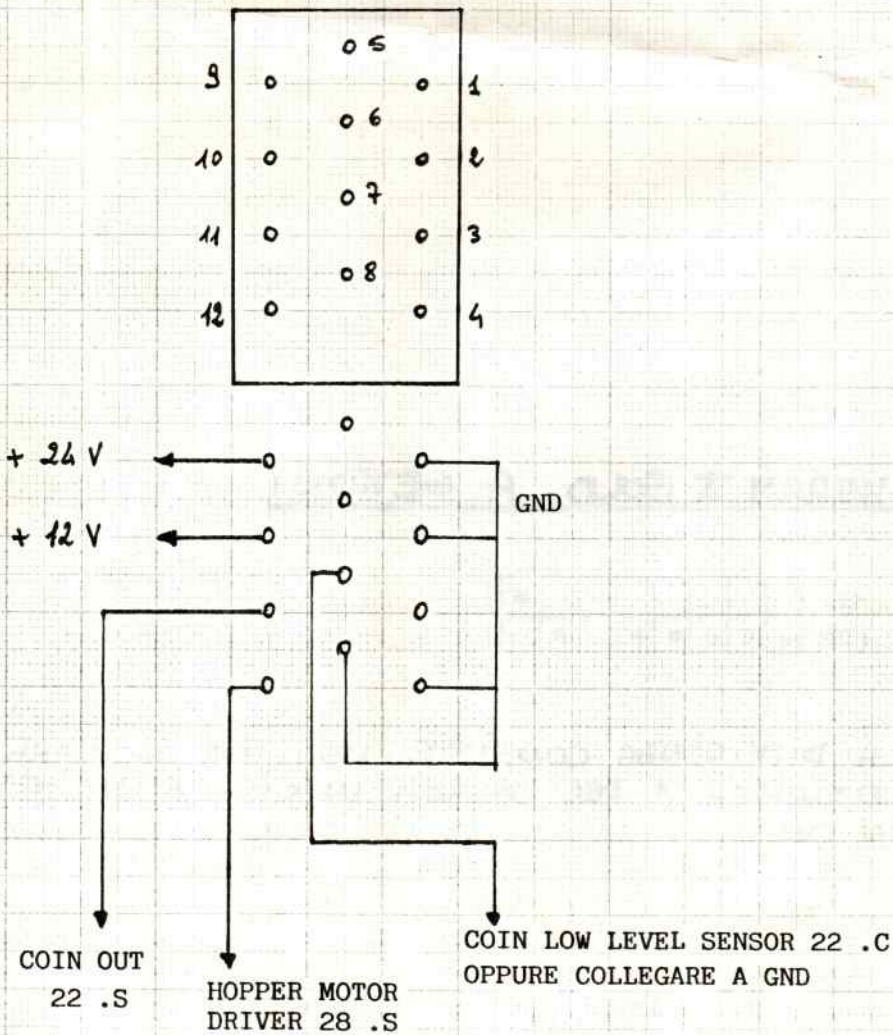


PROGRAMMAZIONE CHERRY I GOLD A TICKET



scheda con dip switch disposti:

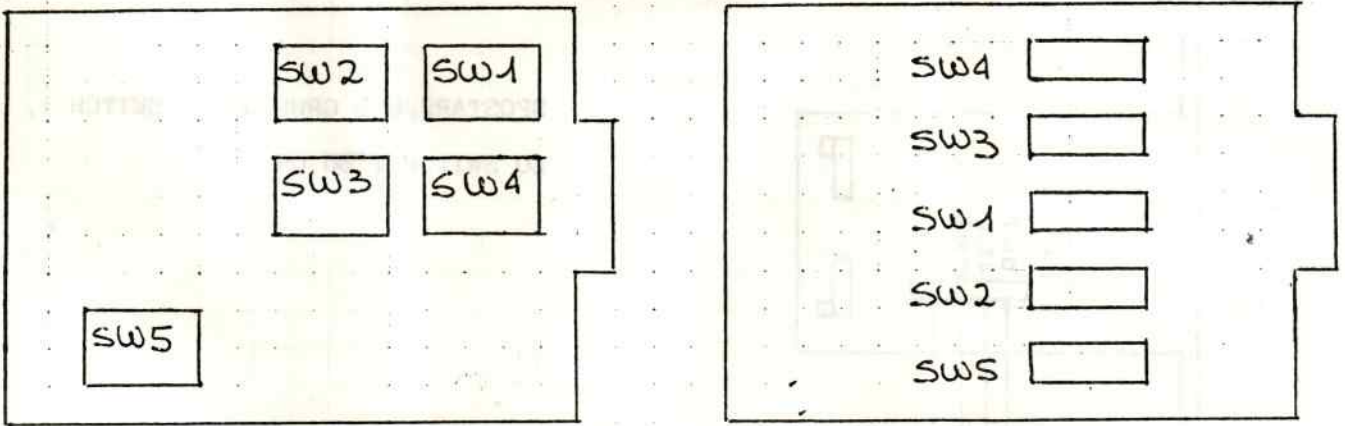

PROGRAMMAZIONE CHERRY I GOLD A GETTONI



LA DIFFERENZA CONSISTE NEL POSIZIONARE LO SWITCH 1 DEL DIPSW1 IN OFF ANZICHÉ IN ON



Dalla Pria

produzione e noleggio videogiochi
esclusivista biliardi De Blasi e GFG Billiards

data 03/12/97

ns. rif. _____

Vs. rif. _____

raccomandata a. r.

oggetto: comunicazione.

Spett.le
MINISTERO INDUSTRIA
Direzione Generale della
Produzione Industriale
Ispettorato Tecnico Industria
Via Molise, 2
00100 ROMA

La sottoscritta ditta **HIGHLIGHT OF THE GAMES** di Dalla Pria Claudio Agostino, con sede in Piove di Sacco (PD) via A. Valerio 3, ai sensi del 2° comma dell'art. 2 della legge 425 del 06 ottobre 1995 che modifica i commi 4° e 5° dell'art. 110 del TULPS,

comunica

a codesto spett.le Ministero di importare e commercializzare una scheda elettronica denominata "CHERRY I GOLD" da installare su apparecchi da trattenimento a premio, la quale consente la vincita di gettoni o ticket, a norma della Legge 425/95, in relazione all'abilità del giocatore, ai sensi dello stesso comma

dichira

che la scheda elettronica denominata "CHERRY I GOLD" non è abilitata al gioco d'azzardo.

In fede.

Highlight Of The Games
di Dalla Pria Claudio Agostino
NOLEGGIO E VENDITA VIDEOGIOCHI
Via A. Valerio 3 Tel. 049/5840045
35028 PIOVE DI SACCO (PD)
Partita IVA 0249575 028 9

Mod. 22 - R cod. 008150
Poste Italiane
Ente Pubblico Economico

RICEVUTA

Accettazione RACCOMANDATA

È vietato includere denaro e valori nelle raccomandate. L'Ente Poste non ne risponde

Compilare, a cura del mittente, e macchina o in carattere stampatello

DESTINATARIO	MINISTERO INDUSTRIA Dirca. Generale		
	DIREZIONE GENERALE DELLA PRODUZIONE INDUSTRIALE - VIA MOLISE 2		
00100 - ROMA			
MITTENTE	Highlight Of The Games		
	di Dalla Pria Claudio Agostino		
NOLEGGIO E VENDITA VIDEOGIOCHI			
Via A. Valerio, 3 Tel. 049/5840045			
35028 PIOVE DI SACCO (PD)			
COM. Partita IVA 0249575 028 9			
SERVIZI ACCESSORI RICHIESTI	<input type="checkbox"/> Espresso <input type="checkbox"/> Via aerea <input checked="" type="checkbox"/> A.R.		
Contrassegnare la casella interessata	<input type="checkbox"/> Assegno L. (in cifra)		

HIGHLIGHT OF THE GAMES
Piove di Sacco (PD) - Italia - Tel. (049) 5840045 - Fax (049) 9702132
Partita IVA 02495750289

50 -41297 AR 7500 5000 PIOVE DI SACCO